



Altai stove

- | | |
|-------------------------|---------------------------------|
| 1. Fireplace | 1. Legs in packing mode |
| 2. Cover | 2. Press button and release leg |
| 3. Door with class | 3. Chek leg is locked |
| 4. A combustion chamber | |
| 5. Grate | |
| 6. Folding legs | |
| 7. Steaming generator | |
| 8. Cooktop | |
| 9. Pipe place | |
| 10. Pipe | |
| 11. Pipe heatcover | |

Protection film have to remove before using

Stove door is stored in ash box

Take care **when installing a pipe** that first pipe is different, there is a overhang, which should be installed downwards. Pipe heat shield come just on first pipe. With watertank cannot use heat shield.

When and before using stove

- Can use only outside or tent
- Check that all parts are intact
- Remove all protection film before using products
- Take care when installing a pipe that first pipe is different, there is a overhang, which should be installed downwards. That overhang makes sure that the pipe is not pressed too far down into the combustion.
- Clean the pipe regularly
- Beware of hot pipe and steel when being used
- Don't use dirty water because steaming generator can be damaged. If you use salt water, you have to washing stove with fresh water after every use.
- With tent model rennosti-10 / terma-10 have to use a rope that is attached in the middle of the wall to keep the fabric off the heater.
- Use food which does not spark.
 - o a big spark that can not get out of the canvas can damage it
- The structure of the heater is such that the water flowing from the pipe coupling flows out of the door, it will not reach the fire