



Altai / Altai Mountain stove

- | | |
|--|---------------------------------|
| 1. Fireplace | 1. Legs in packing mode |
| 2. Cover | 2. Press button and release leg |
| 3. Door (Altai with class) | 3. Chek leg is locked |
| 4. A combustion chamber | |
| 5. Grate | |
| 6. Folding legs | |
| 7. Altai model have Steaming generator | |
| 8. Cooktop / Mountain model have stone place | |
| 9. Pipe place | |
| 10. Pipe | |
| 11. Pipe heatcover | |

Protection film have to remove before using

Stove door is stored in ash box

Take care **when installing a pipe** that first pipe is different, there is a overhang, which should be installed downwards. Pipe heat shield come just on first pipe. With water tank cannot use heat shield. Put on propel on stove pipe hole, before pipe.

When and before using stove

- Can use only outside or tent
- Check that all parts are intact
- Remove all protection film before using products
- Take care when installing a pipe that first pipe is different, there is a overhang, which should be installed downwards. That overhang makes sure that the pipe is not pressed too far down into the combustion.
- Clean the pipe regularly
- Beware of hot pipe and steel when being used
- Don't use dirty water because steaming generator can be damaged. If you use salt water, you have to washing stove with fresh water after every use.
- With tent model rennosti-10 / terma-10 have to use a rope that is attached in the middle of the wall to keep the fabric off the heater.
- Use food which does not spark.
 - o a big spark that can not get out of the canvas can damage it
- The structure of the heater is such that the water flowing from the pipe coupling flows out of the door, it will not reach the fire